

25 METER ZEROING TARGET
M16A2 / M16A4



Zero Target data for M16A2/ M16A4 Rifle:

- 1 - For zeroing at 25 meters, rotate the rear sight elevation knob to the 300 Meter setting. Then clockwise (up) one click past the 300 Meter setting for M16A2 Rifle. Clockwise (up) two clicks past the 300 Meter setting for the M16A4 Rifle.
- 2 - Aim at target center. Adjust sights to move shot group center as close as possible to the white dot in the center of the target.
- 3 - After completing the 25 Meter zero, rotate the rear sight elevation knob counter-clockwise (down) one click to the 300 Meter setting for the M16A2 Rifle, down two clicks to the 300 Meter setting for the M16A4 Rifle. The weapon will be zeroed for 300 Meters.

